

Assembly Instructions




Track Title		(inch)			(mm)			
	Piece	Thickness	Length	Width	Piece	Thick	Height	Most
A		1,18	17,64	17,28	2	30	448	439
В		1,18	85,12	17,32	1	30	2162	440
с		1,18	85,12	17,32	1	30	2162	440
D		1,18	17,64	16,50	1	30	448	419
E		1,18	17,64	16,50	2	30	448	419
E		0,31	18,27	83,39	1	8	464	2118

Accessories List

MNX 02	MNG - 01	KVL 01	TAP - 01
0	E E		\bigcirc
12 / piece	12 / piece	20 / piece	12 / piece
DSE - 01 (40x90x32) mm	DD - 01 (R10)	TFC - 01(8x70) mm	PL - 02 (8x22x1) mm
	D		Ø
3/ piece	3 / piece	3 / piece	3 / piece
VTB - 01 (4,8x16) mm	VD - 02 (3,5x25) mm		
EMM	Doppopping		
12/ piece	6 / piece		


-



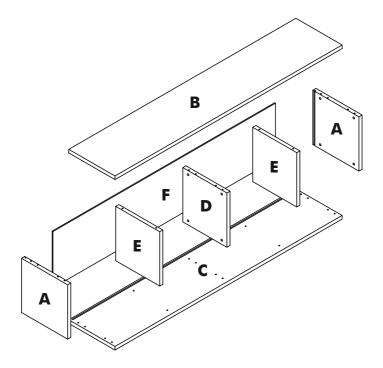




STEP 1

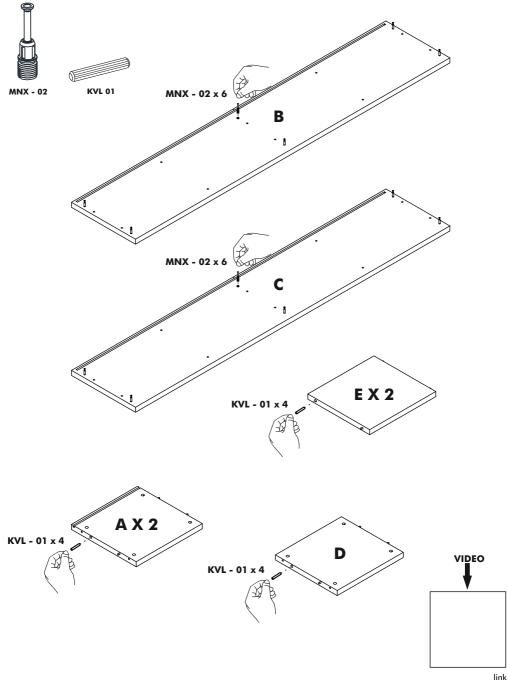


3




STEP 2

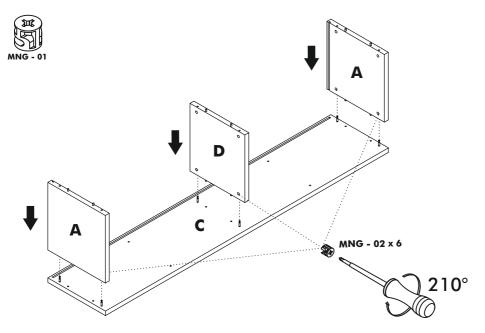

STEP 3

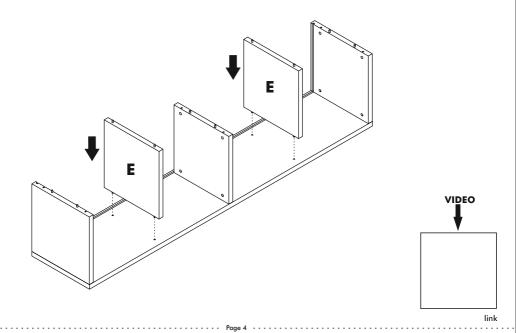




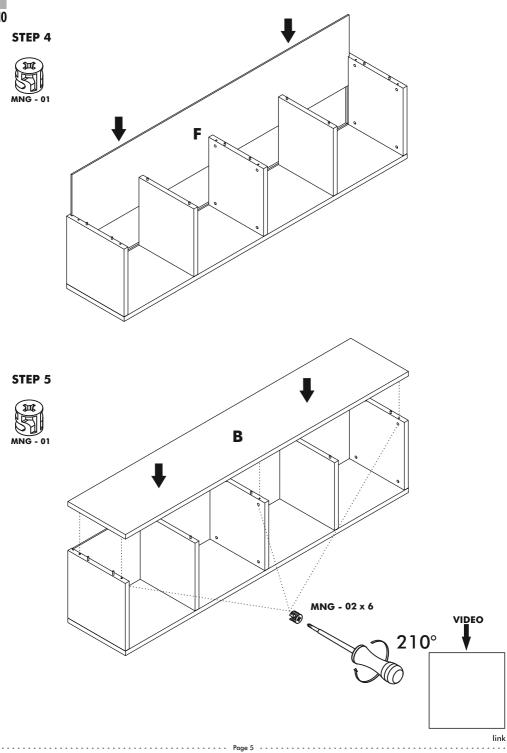

.



STEP 6

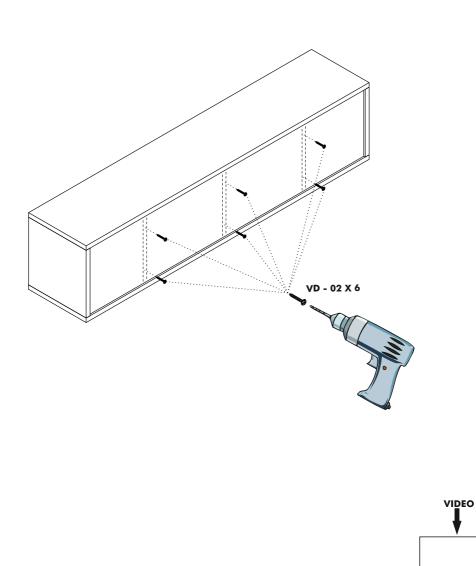

link



Must be secured to the wall made of brick, concrete or similarly strong material. Mounting to wooden or metal studs is also acceptable. Do not mount directly to sheetrock or paper-mache type walls not supported by studs.


DD - 01 Ø 10 mm / 0,254 inch PL - 02 0 Qà Ø **TFC - 01 VTB - 01** 0 **DSE - 01** 6 A 219-1 \leq K TAP - 01 6 ۲ ċ A 211 Ø VIDEO

Page 7


link

WALLS MADE OF DRYWALL WITH WOODEN OR METAL STUDS



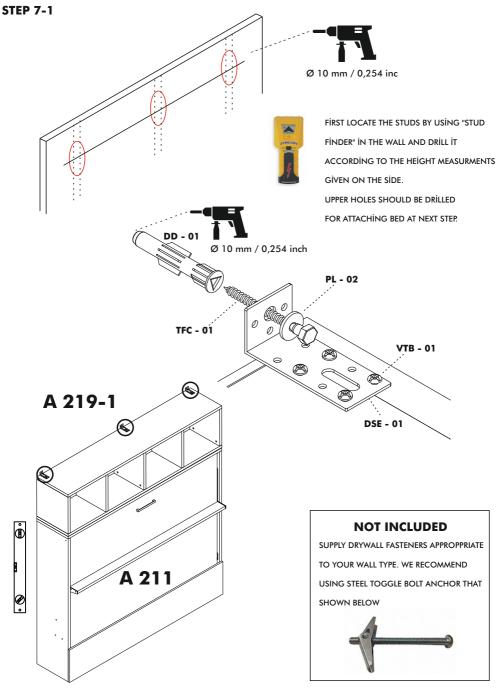



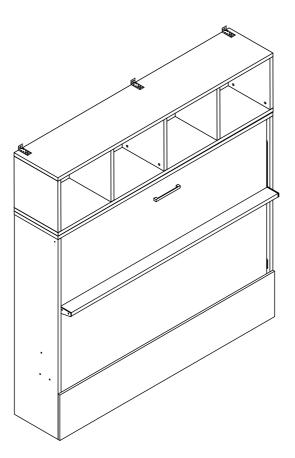



ATTENTION / HOW TO / READ ME / OWNER'S GUIDE

- 1. Cabinets must be securely attached either to the wall and / or side of the wall bed. Hardware is included
- When mounting to drywall, use appropriate fasteners, such as toggle bolts or attach to wooden or metal studs. Please choose appropriate fasteners for the type of wall and / or studs the cabinet will be mounted on. Drywall mounting fasteners are not included.
- 3. For safety and product longevity you must periodically inspect the integrity and tightness of the mounting and mechanical connections. Confirm hardware remains properly affixed and connections are snug.
- 4. Do not lean or rest heavy objects on sides or top of furniture. This may cause balance issues and compromise the integrity of your mounting connections.
- 5. Please use cabinet shelves and clothes rails as intended. Do not place extremely heavy items on shelves and / or drawers. Improper use may cause personal injury and damage to property.
- 6. With seasonal humidity change please inspect the interior and exterior of the furniture for deformation and/or discoloration.
- 7. Before any un-mounting or disassembly please contact Multimo Beds for technical support and instructions. Failure to properly detach may result in personal injury and damage to property.





www.multimobeds.com